


# MAKING A SIMPLE JOIN USING THE SCREWS

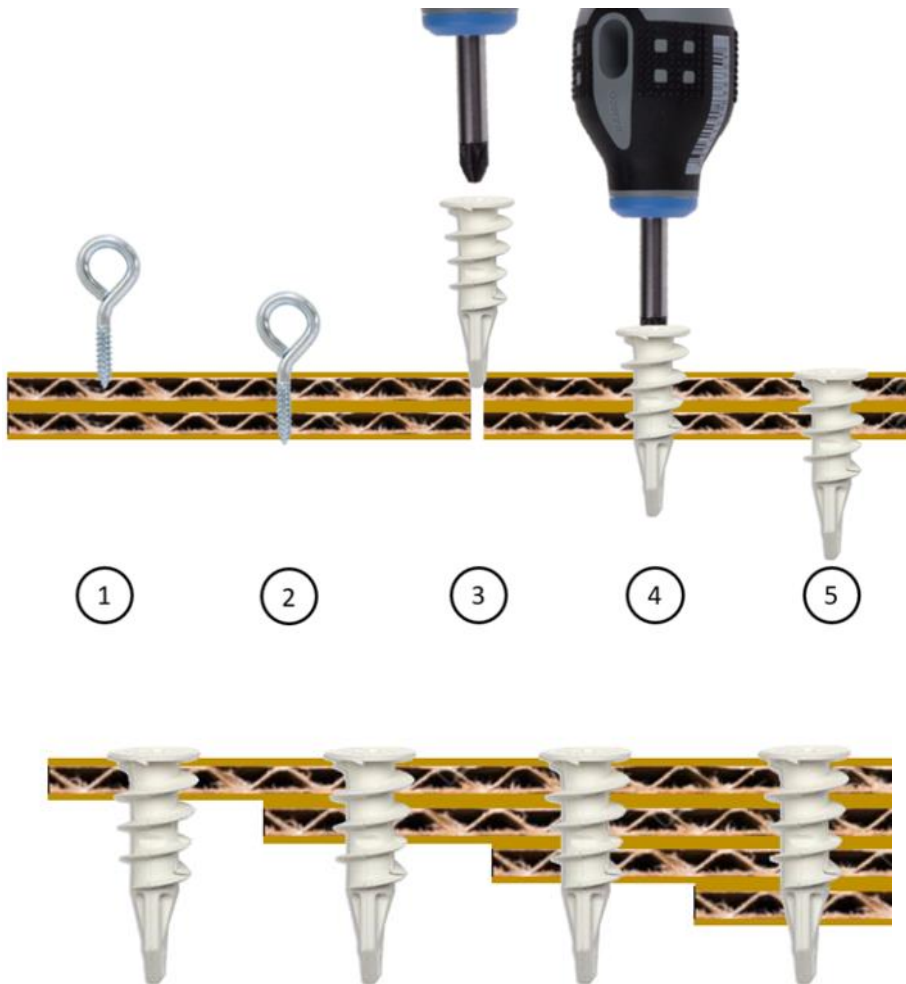

1. If a pilot hole is needed, use one of the metal screw eyes to make a hole.
2. Make a hole through the layers you want to connect being careful not to catch a finger on the other side.
3. Insert the tip of the screw into the pilot hole.
4. Use the screwdriver in the X shaped slot in the top of the screw to join the layers.
5. Stop when the shoulder of the screw reaches the surface.

Multiple layers can make a very strong 'ply'.